


0199




0198


Position ID	Spare part no.	Replacement	Description
0104	00552949		No spare part change
0187	00611719		Cable harness
0198	00600243		Screw-set
8441	00546587		Cookery book
8431	00545547		Installation instructions
0111	00674303	00704213	Repair-set
0130	00669080	00704213	Repair-set
0168	00671636	00704213	Repair-set
0199	00552829		Part not included in this appliance
8442	00560938		Cookery book
0173	00672385		Operating module programmed
0148	00616884		Ring
8443	00564431		Cookery book
0173	00679369	00709634	Operating module not programmed
8406	00381598		Instruction manual
0178	00620010	00627648	Potentiometer
8030	00612594		Child-protection
0198	00629127		Screw

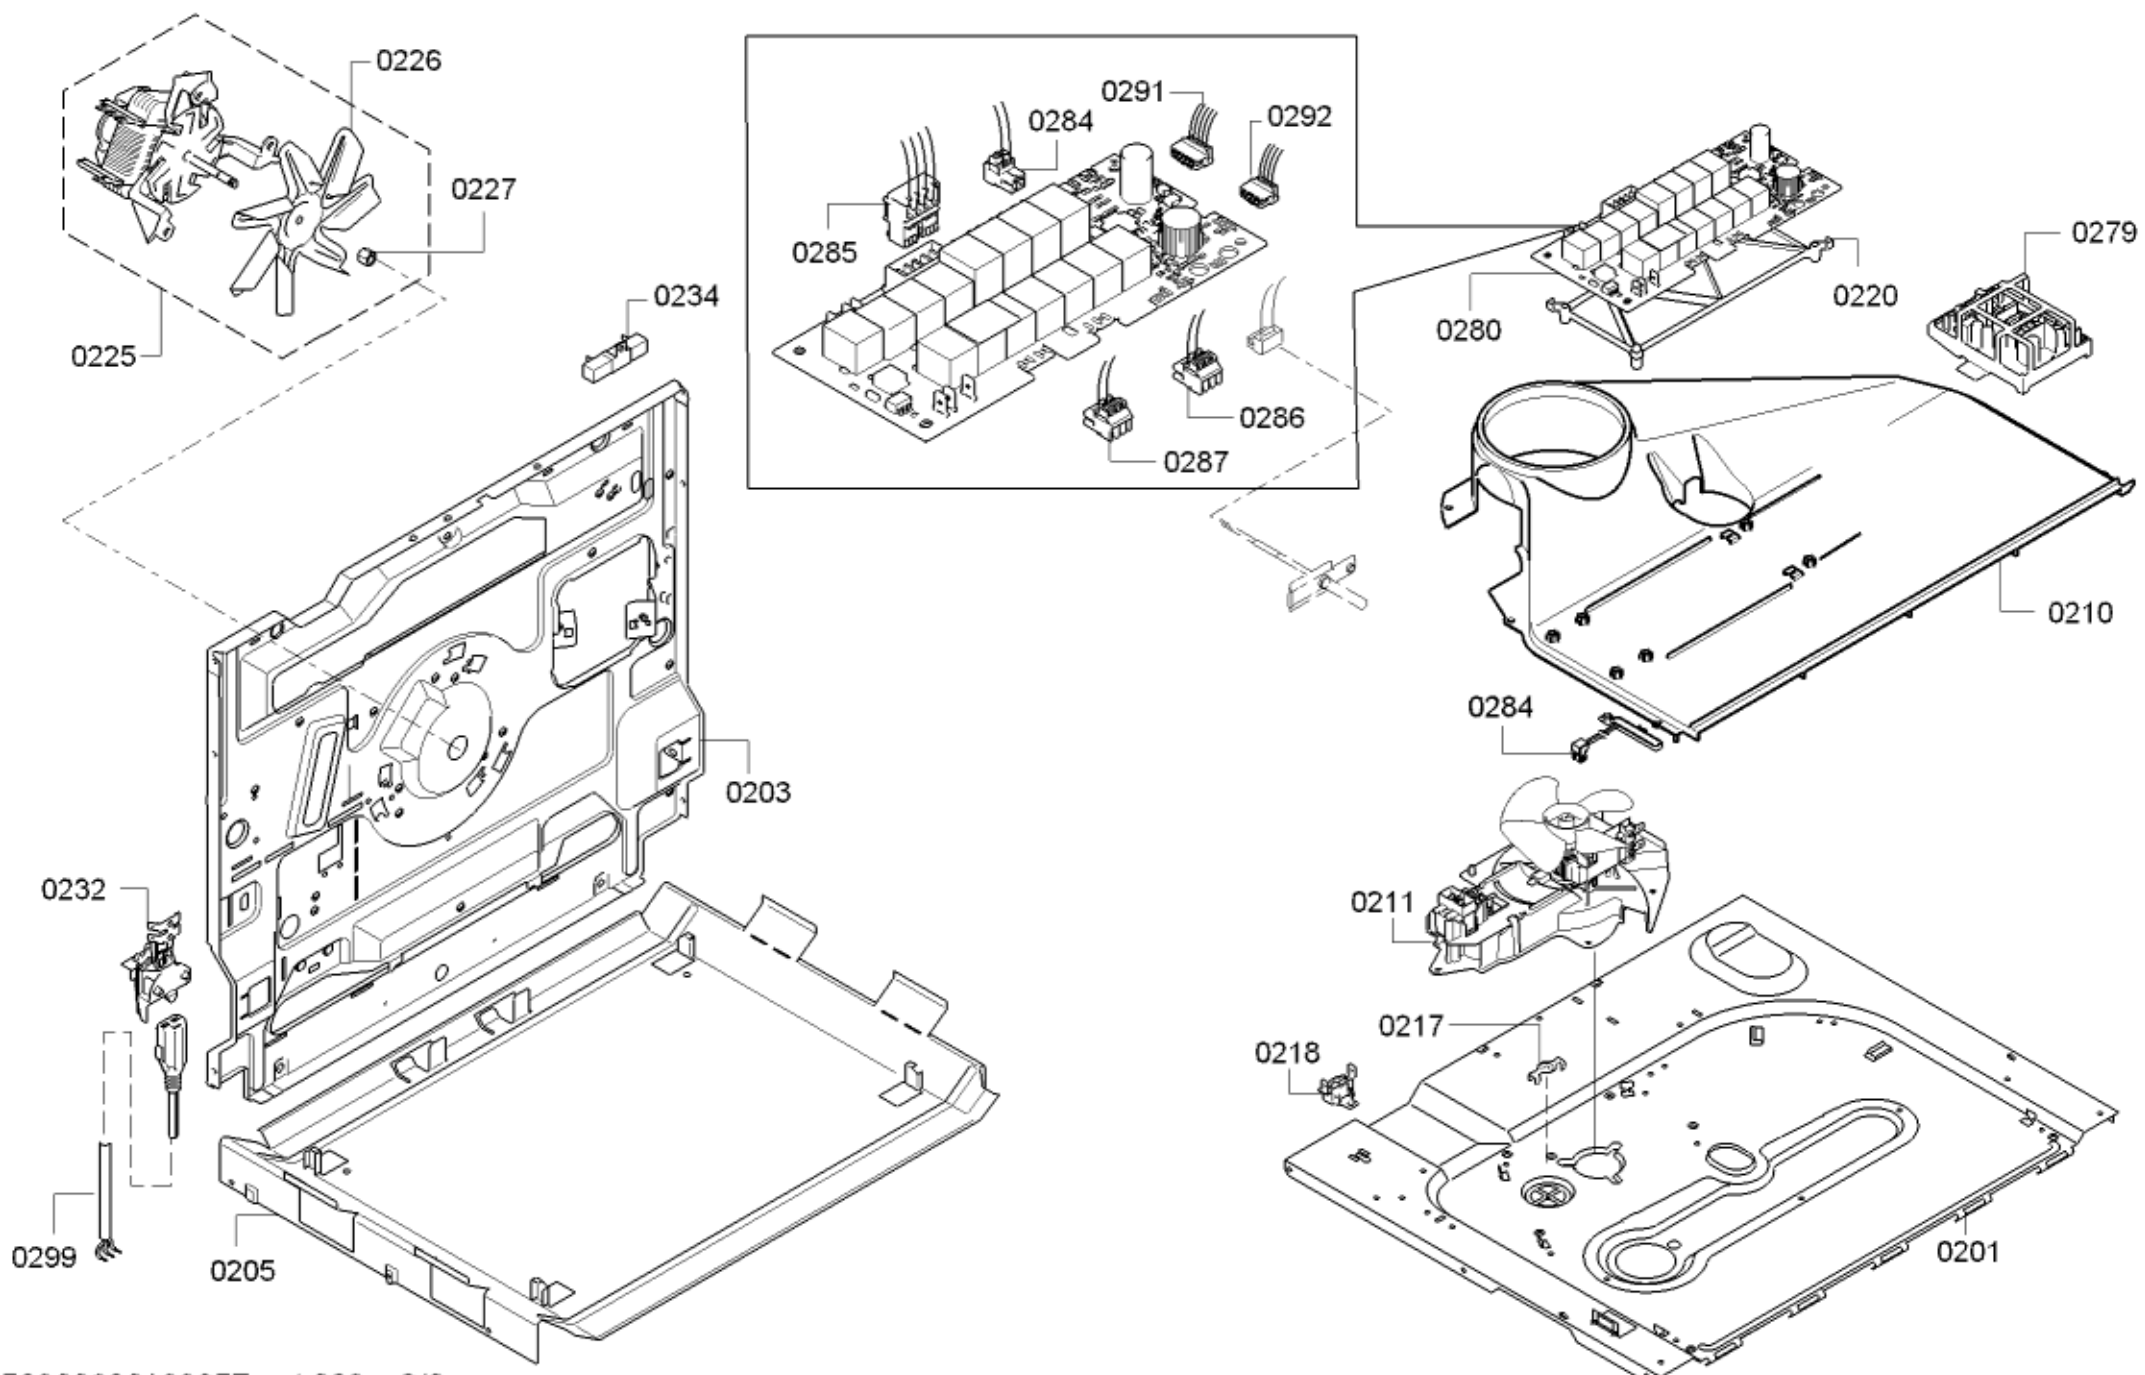


Position ID	Spare part no.	Replacement	Description
0201	00680200	00685893	Sheet
0203	00680061		Sheet
0205	00479676		Housing part
0210	00667738		Ventilation duct
0211	00490813		Fan motor
0217	00610866		Bracket
0218	00420753		Limiter-temperature
0220	00644891		Holder
0225	00641943	00651461	Blower motor
0280	00646074	00657051	Control module
0284	00610757		Contact
0285	00611586	00622785	Cable harness
0286	00611041		Cable harness
0291	00425759		Cable harness
8441	00546587		Cookery book
0232	00644826	00659922	Socket
0292	00611717		Cable harness
8431	00545547		Installation instructions
8442	00560938		Cookery book
0299	00644823		Power cord
8443	00564431		Cookery book
8406	00381598		Instruction manual
0227	00619246		Nut
0226	00650472		Fan blade
0279	00495658		PC board assembly-mains power
0234	00552829		Part not included in this appliance
8030	00612594		Child-protection

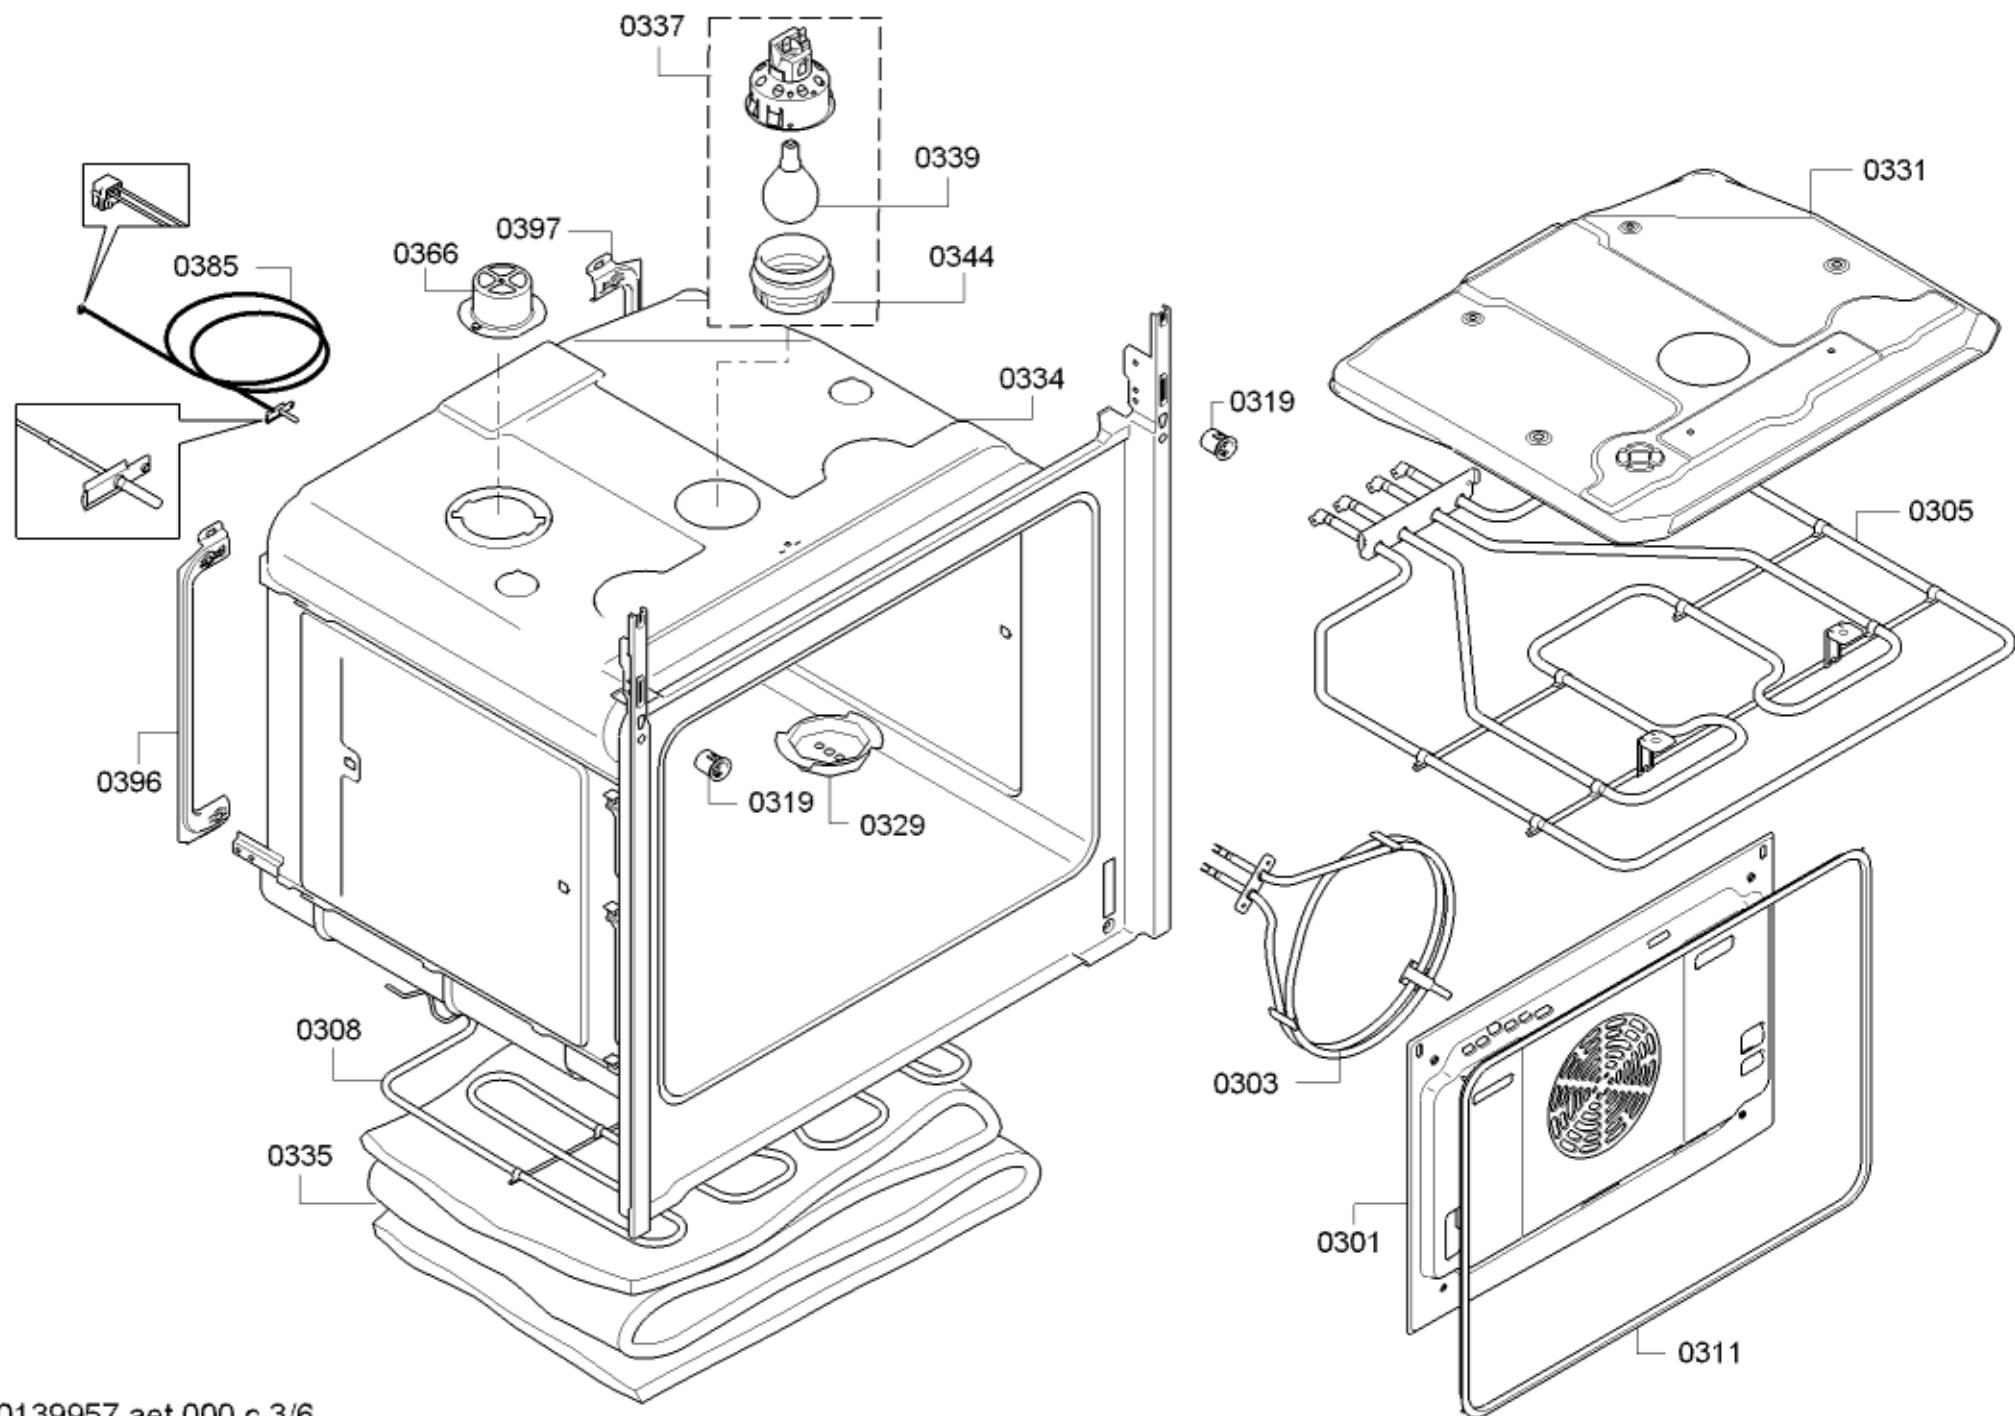


Position ID	Spare part no.	Replacement	Description
0301	00669670		Hot-air guide plate
0308	00471851		Heater-bottom
0311	00423656	00754066	Seal-door
0319	00068492		Bushing
0329	00174081	00621224	Filtering jug
0335	00470886		Insulating part
0337	00420775		Lamp complete
0339	00057874		Lamp
0344	00424086	00647309	Glass light cover
0366	00420839		Filtering jug
0385	00423842		Sensor-PTC
0396	00669411		Holder
0397	00669412		Holder
8441	00546587		Cookery book
8431	00545547		Installation instructions
8442	00560938		Cookery book
0303	00443526		Heater-ring
0331	00471267		Catalytic ceiling
8443	00564431		Cookery book
0305	00684722		Heater-top
8406	00381598		Instruction manual
8030	00612594		Child-protection

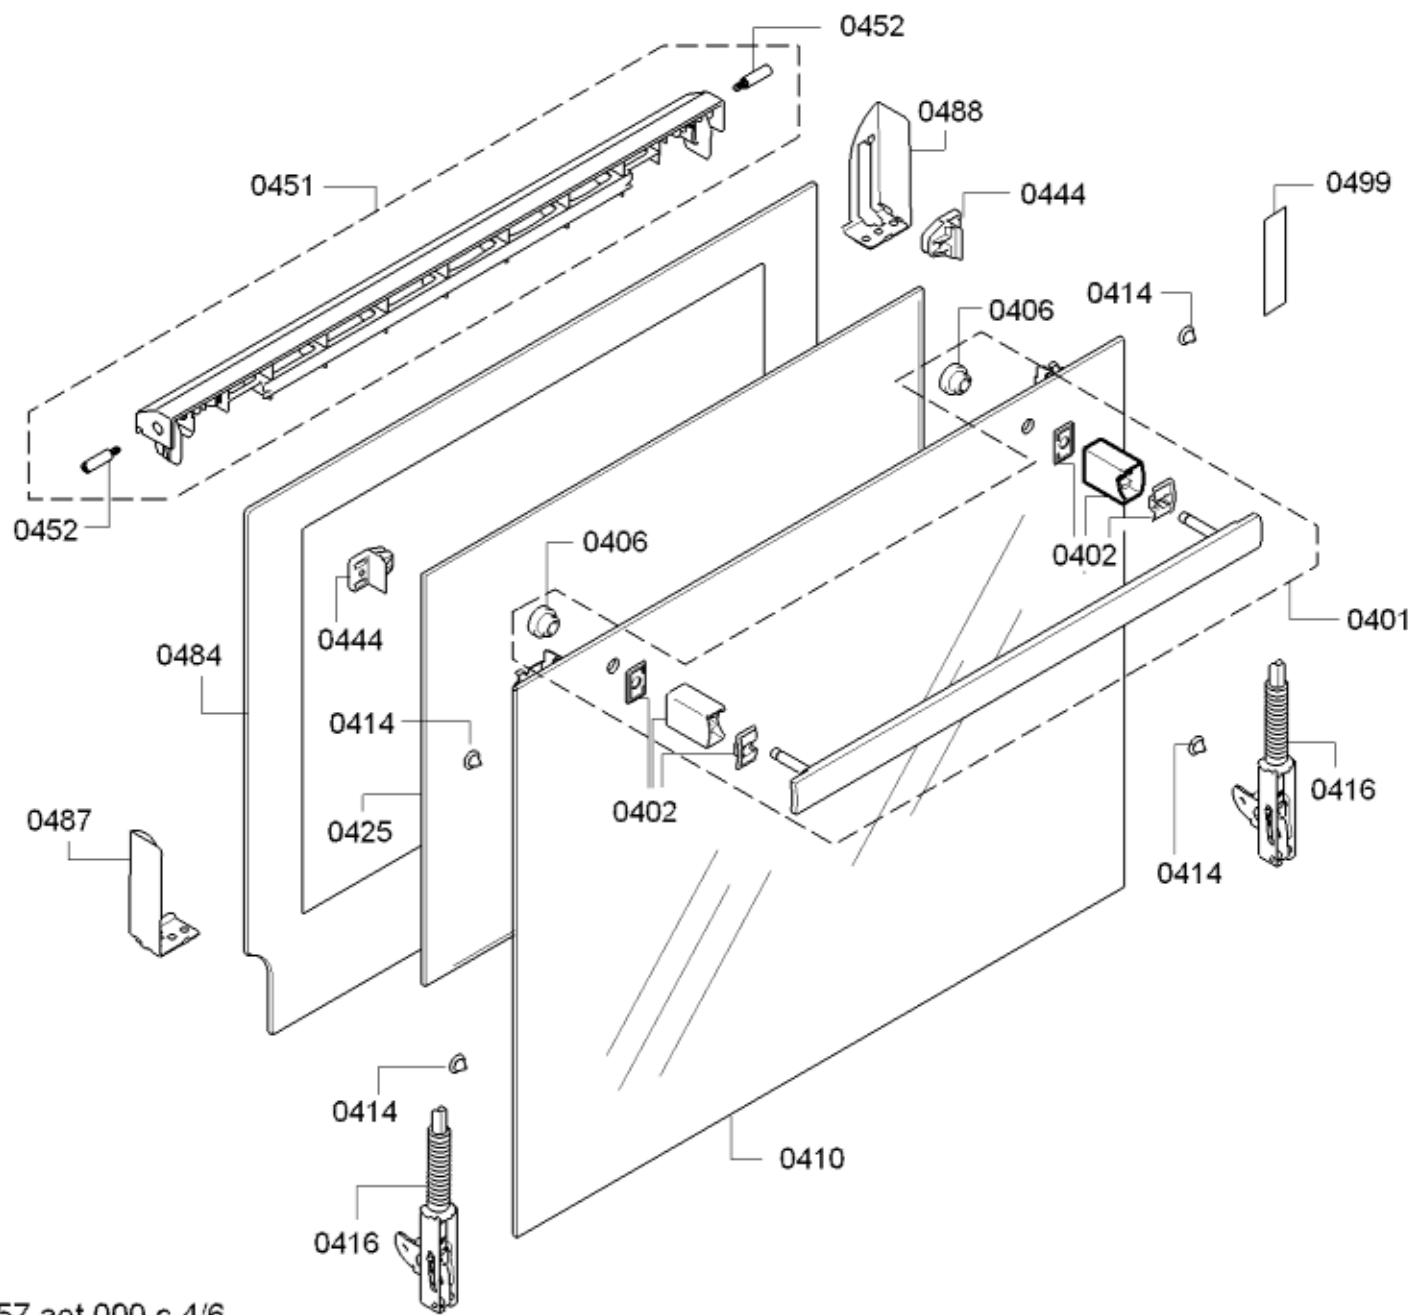

Position ID	Spare part no.	Replacement	Description
0406	00606677		Sealing
0414	00420735		Spacer
0452	00605886		Screw
0456	00427046		Permanent magnet
0487	00612596		Panel
0488	00612595		Panel
0499	00519252	00633848	Identification plate
8441	00546587		Cookery book
8431	00545547		Installation instructions
0401	00667890		Handle-door
0402	00611080		Base
0410	00680740		Glass front panel
8442	00560938		Cookery book
0425	00470864		Inner glass
0416	00648021		Door hinge
0444	00613292	00617385	Clip
8443	00564431		Cookery book
0401	00621731	00627106	Screw
8406	00381598		Instruction manual
0484	00685401		Inner glass
0451	00678268		Ventilation panel
8030	00612594		Child-protection

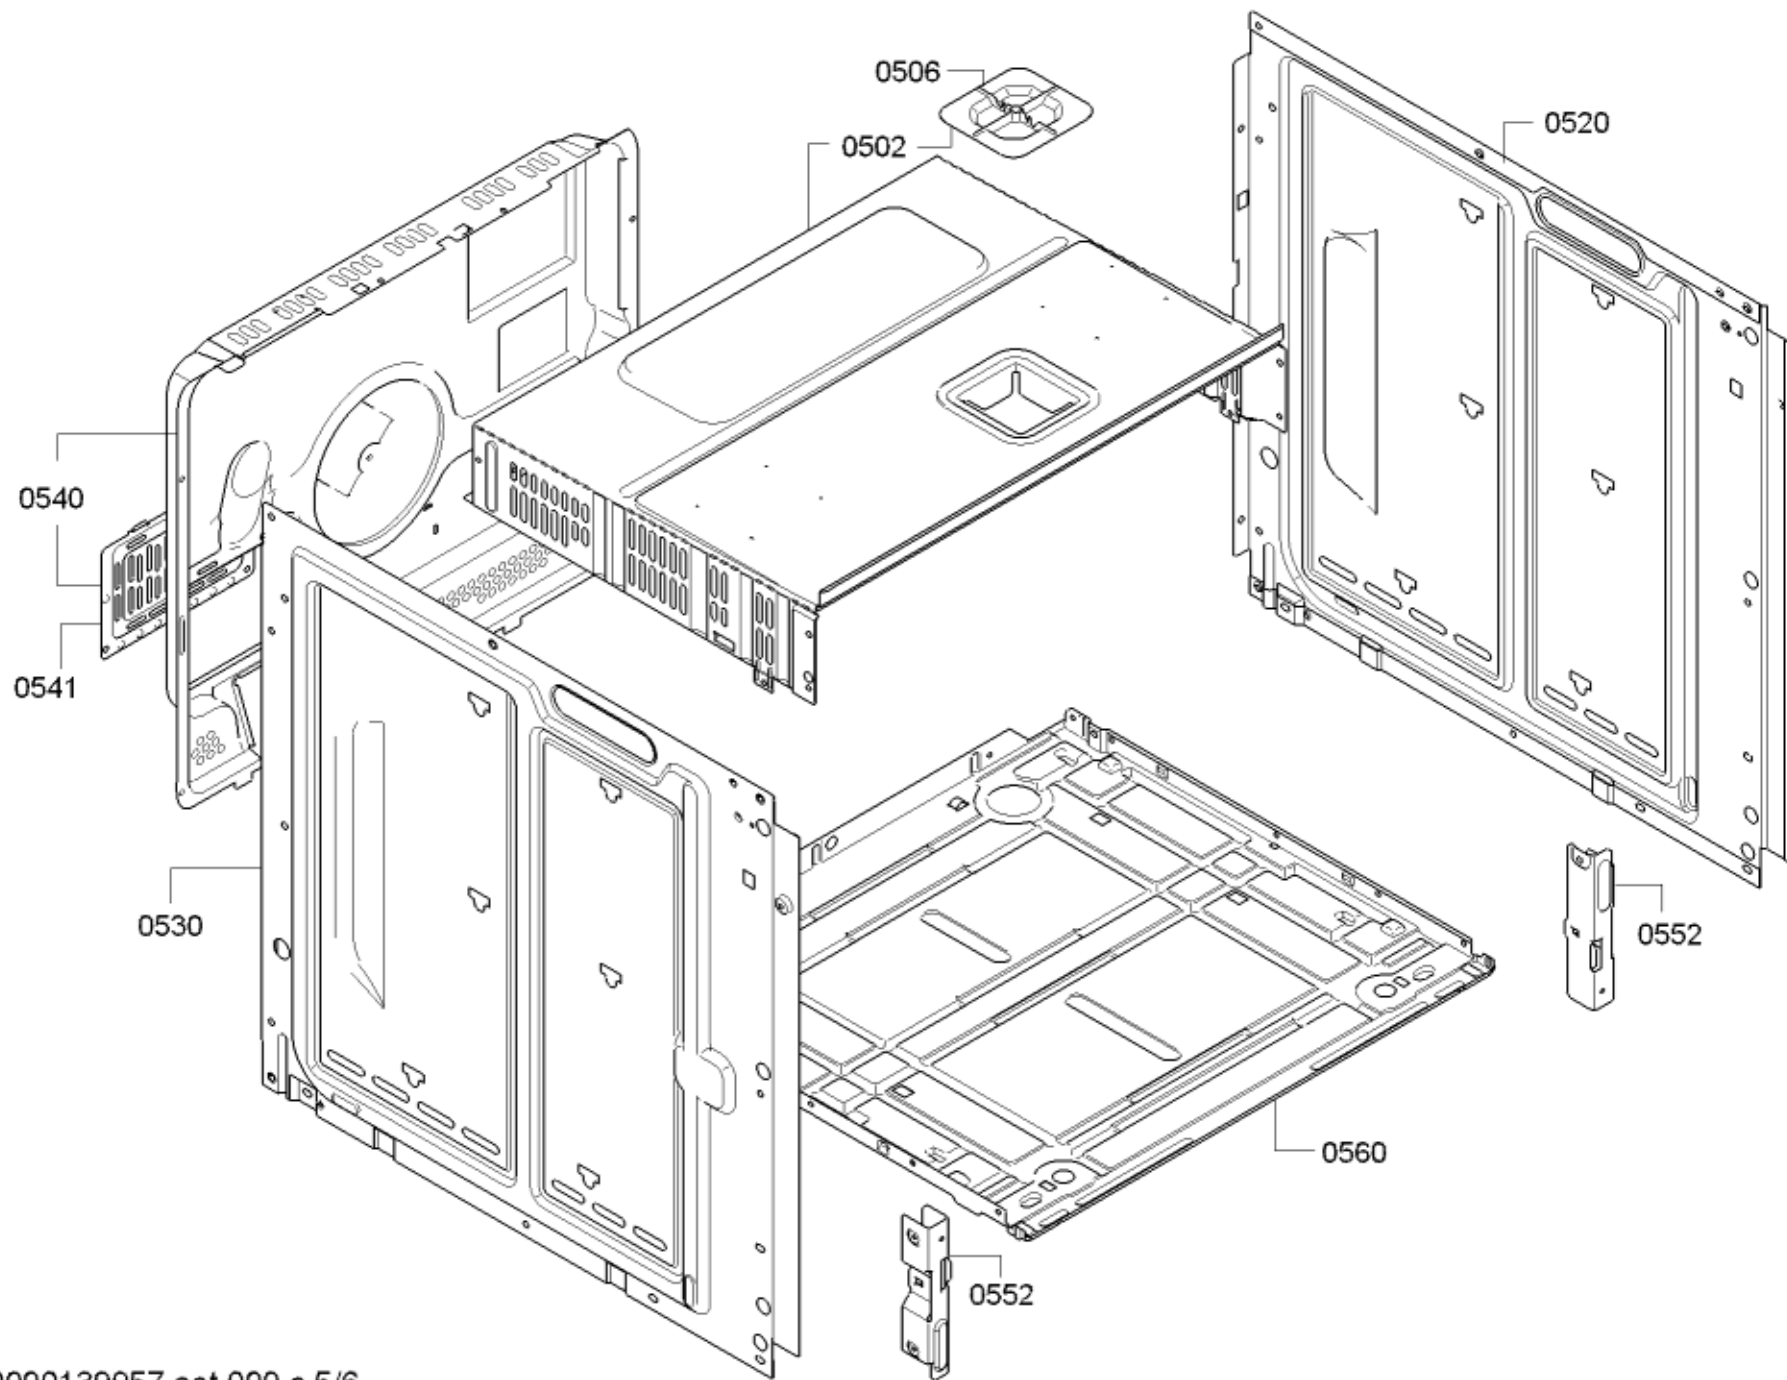

Position ID	Spare part no.	Replacement	Description
0506	00611706		Cover
0520	00680091		Panel side
0530	00680092		Panel side
0540	00470726		Case-rear part
0552	00644486		Holder
0560	00479675	00770858	Case-bottom
8441	00546587		Cookery book
0502	00680976		Cover
8431	00545547		Installation instructions
0541	00084500		Cover
8442	00560938		Cookery book
8443	00564431		Cookery book
8406	00381598		Instruction manual
8030	00612594		Child-protection
0506	00626874	00752437	Sticker

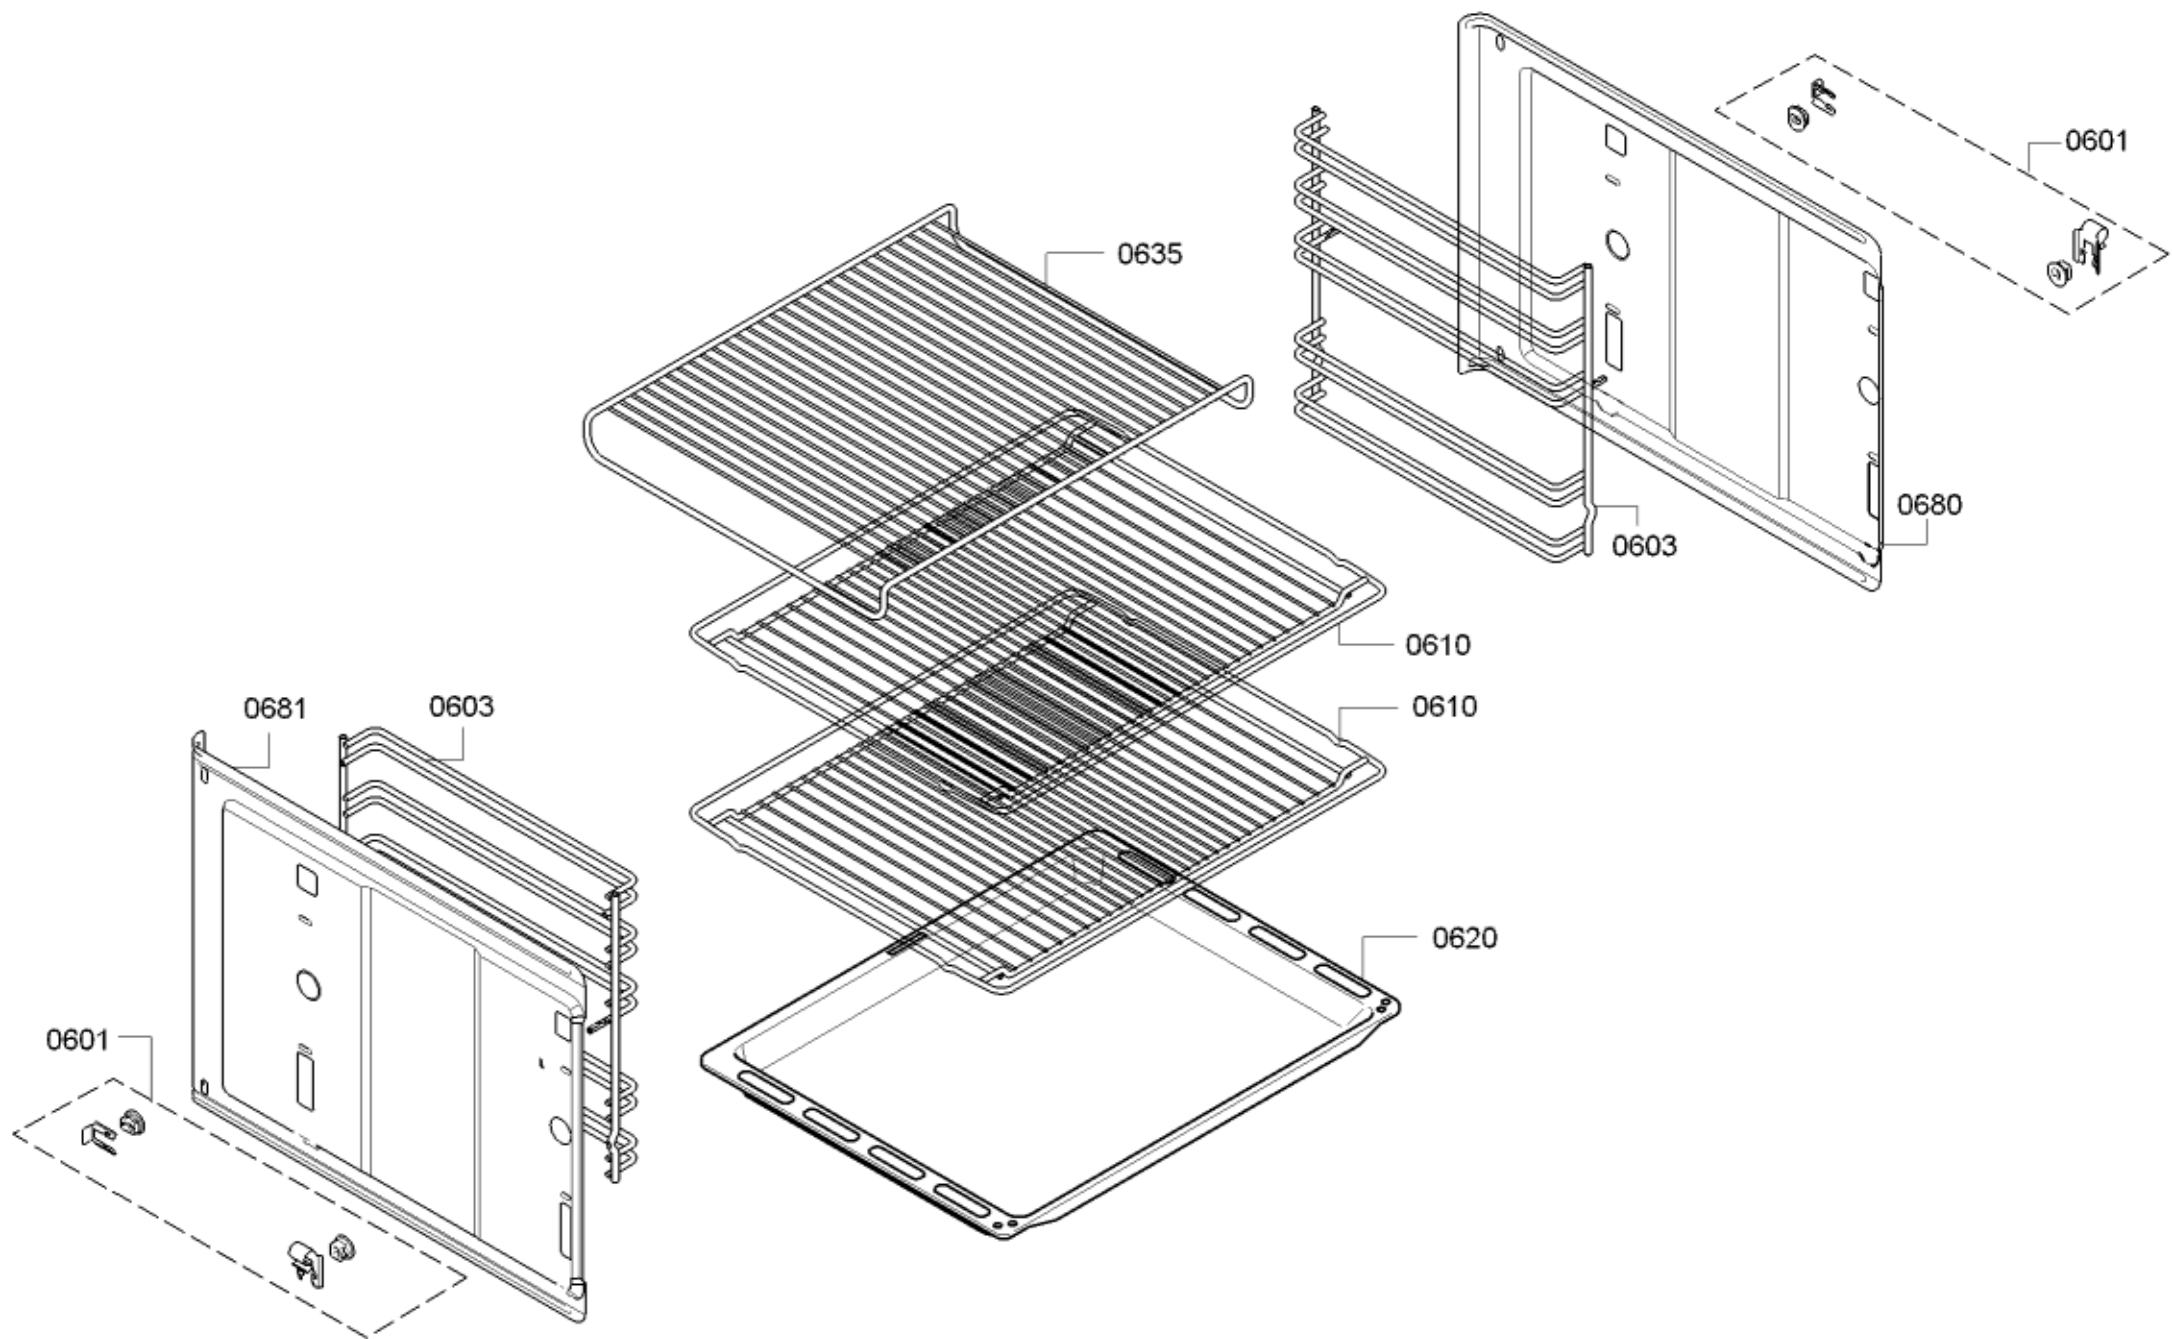

Position ID	Spare part no.	Replacement	Description
0601	00611119	00626210	Bushing
0603	00434605	00472738	Holder
0620	00434178		Frying pan
8441	00546587		Cookery book
8431	00545547		Installation instructions
8442	00560938		Cookery book
0610	00440579	00574876	Multi-use wire shelf
0635	00435794	00740766	Wire grille insert
0680	00663345		Liner-catalytic
0681	00663344	00671696	Liner-catalytic
8443	00564431		Cookery book
8406	00381598		Instruction manual
8030	00612594		Child-protection